

WIRELESS RF ROOM THERMOSTAT WITH 7DAY CLOCK



(20059643)


ENCODING INSTRUCTIONS

The coupling of the receiver and transmitter is factory set, however if it is necessary to recouple the transmitter to the receiver, proceed as follows:


1. Isolate power from the boiler.

TRANSMITTER:


2. Press and hold the encoder for 5 seconds, until the   icons start to flash.

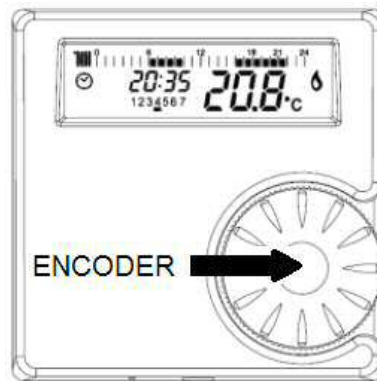


3. Turn the encoder anti clockwise until "PL" starts flashing on the screen.

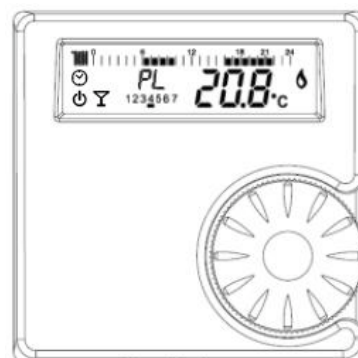


4. Press the encoder once, "PASS" will start to flash.

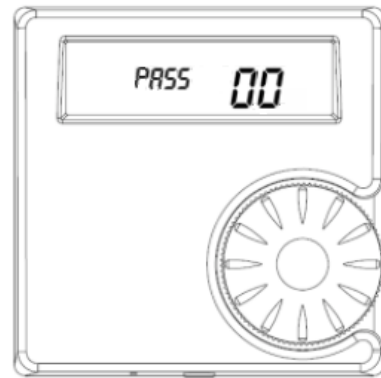


5. Turn the encoder clockwise until "53" is shown on the screen.

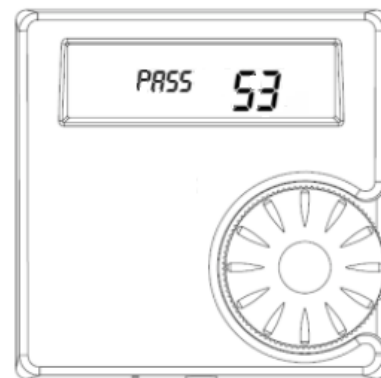


6. Press the encoder once, "CALI 01" will appear on the screen.

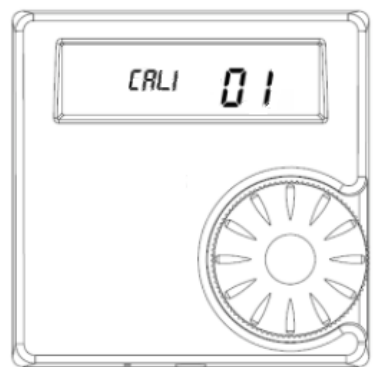

7. Turn the encoder clockwise until "Encd 05" appears on the screen.

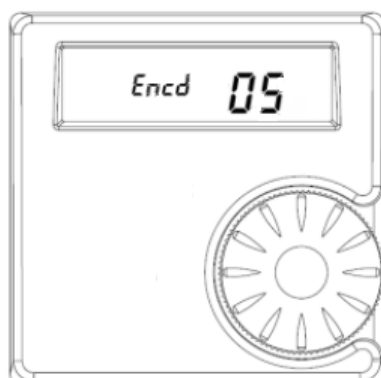


8. Press the encoder once.

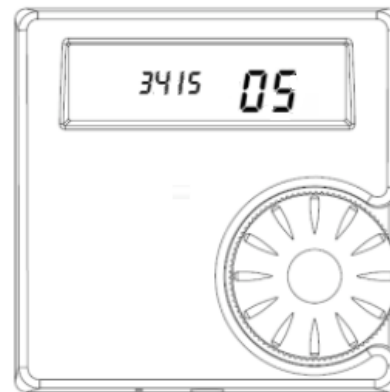

9. Power the boiler. (*Ignore the boiler's pump purge cycle*).


RECEIVER:

10. On the receiver, press and hold the button for 5 seconds.

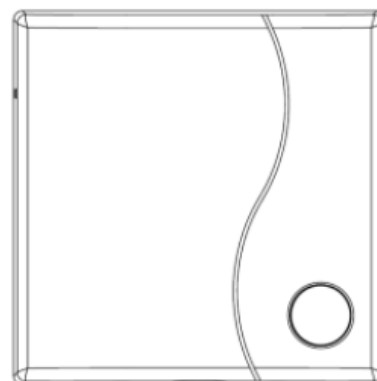


The red & green LEDs will start to blink alternately.

This starts the encoding procedure between the transmitter and the receiver.

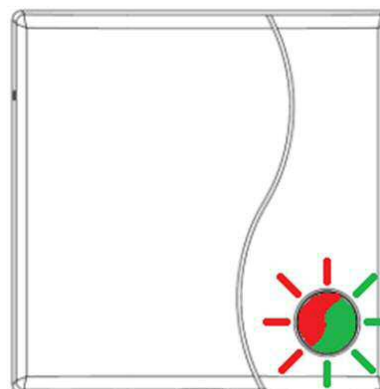


When the LEDs on the receiver stop blinking, this will confirm the coupling is done.


11. On the transmitter, press the encoder once. “Encd 05” appears on the screen.

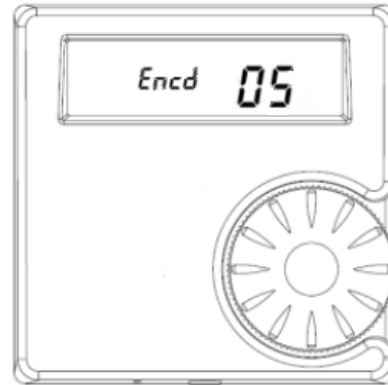

12. Turn the encoder clockwise until “EXIT” appears on the screen.

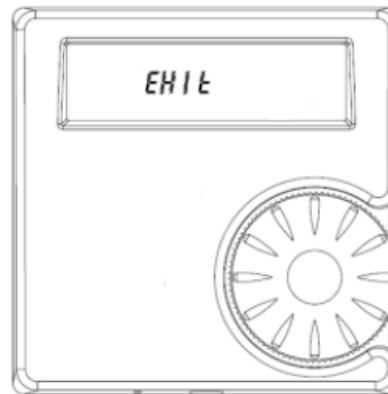

13. Press the encoder once to Exit.

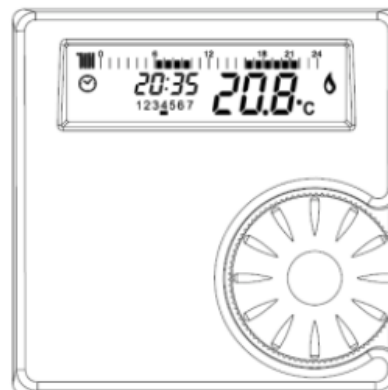

SETTING TIME OF DAY AND DAY OF WEEK

Press and hold the large selector switch until the icons on the left start flashing



Let the switch go, then turn it slowly clockwise until the time symbols starts flashing **88:88**

Click the switch and the hour will start flashing **88:** turn the large selector switch clockwise to set the correct hour. Press the knob to exit.

Turn the large selector switch clockwise and the minutes will flash **:88** turn the selector clockwise to alter the minutes, then push to exit.

Turn the selector switch clockwise to highlight the day of the week,

Press large selector switch, then let go, and then turn the selector switch clockwise to the correct day Monday being 1, Tuesday being 2 etc. **1234567** press again to exit.

PROGRAMMING

To set the ECOT temperature (this is the economy temperature that the house will be at when the heating program is in an off position)

Press the large selector switch until the icons on the left flash



the temperature flashes and ECOT is highlighted **EC 0t** Turn the selector switch clockwise until

Press the large selector switch and alter the ECOT temperature to the desired temperature. In the Summer it may only be set at 8°C and in Winter set at 12°C. The house will now be maintained at this minimum temperature when heating is set in the off position.

TO PROGRAM EACH DAY OR BLOCK BOOK



Press and hold the large selector switch until the icons on the left start flashing

Let the switch go and then turn the switch clockwise until the black bars at the top adjacent to the radiator symbol



start flashing.

Press the large selector switch and the numbers 1 to 5 will flash **12345** this will allow you to program times for Monday till Friday.

Turn the selector switch Anti-clockwise to set the times you want the heating off and clockwise to set when you want the heating on. Use the actual time shown as reference and not the black blocks. Press the large selector switch to exit.


Turn the selector switch clockwise to highlight 6 and 7 then press to enter for setting Saturday and Sunday.

Turn the selector switch anti-clockwise to set the off settings and clockwise to set the on settings, use the actual time for reference and not the black blocks. Press the selector switch to exit.

TO OVER-RIDE THE SETTINGS AND PUT THE BOILER ON



Press and hold the large selector switch until the icons on the left start flashing then let the switch go.

Press the selector switch again to highlight only the icons, then turn the selector switch clockwise to highlight the glass icon  then press the switch again.

Now simply turn the large selector switch until the temperature is above whatever is shown on the display





The display will flash for 3 seconds then the flame icon will appear and the boiler will come on



To put the heating off, simply turn the large selector switch below the temperature shown, the temperature will flash for 3 seconds and the flame icon will disappear.

TO OVER-RIDE CLOCK TO PUT HEATING ON

Press and hold the selector switch for 2 seconds and the icon  will appear and the boiler will operate for heating until it reaches the next off setting.

To switch off from this, simply press the selector switch again for 2 seconds and the icon  will disappear and the boiler will be off until the next on setting